

U 碎纸机使用说明书 USER'S MANUAL

ARTICLE NO
9900 9910 9920 9930

目 录

使用时注意事项

产品

装箱清单

使用说明

保养方法

常见故障分析及排除

.....

.....

.....

.....

.....

.....

.....

将头发等卷入进纸口。
如不慎卷入, 请按住“反转/REV”钮, 然后除去

表

 
号

 
 
数量

备注

附外九



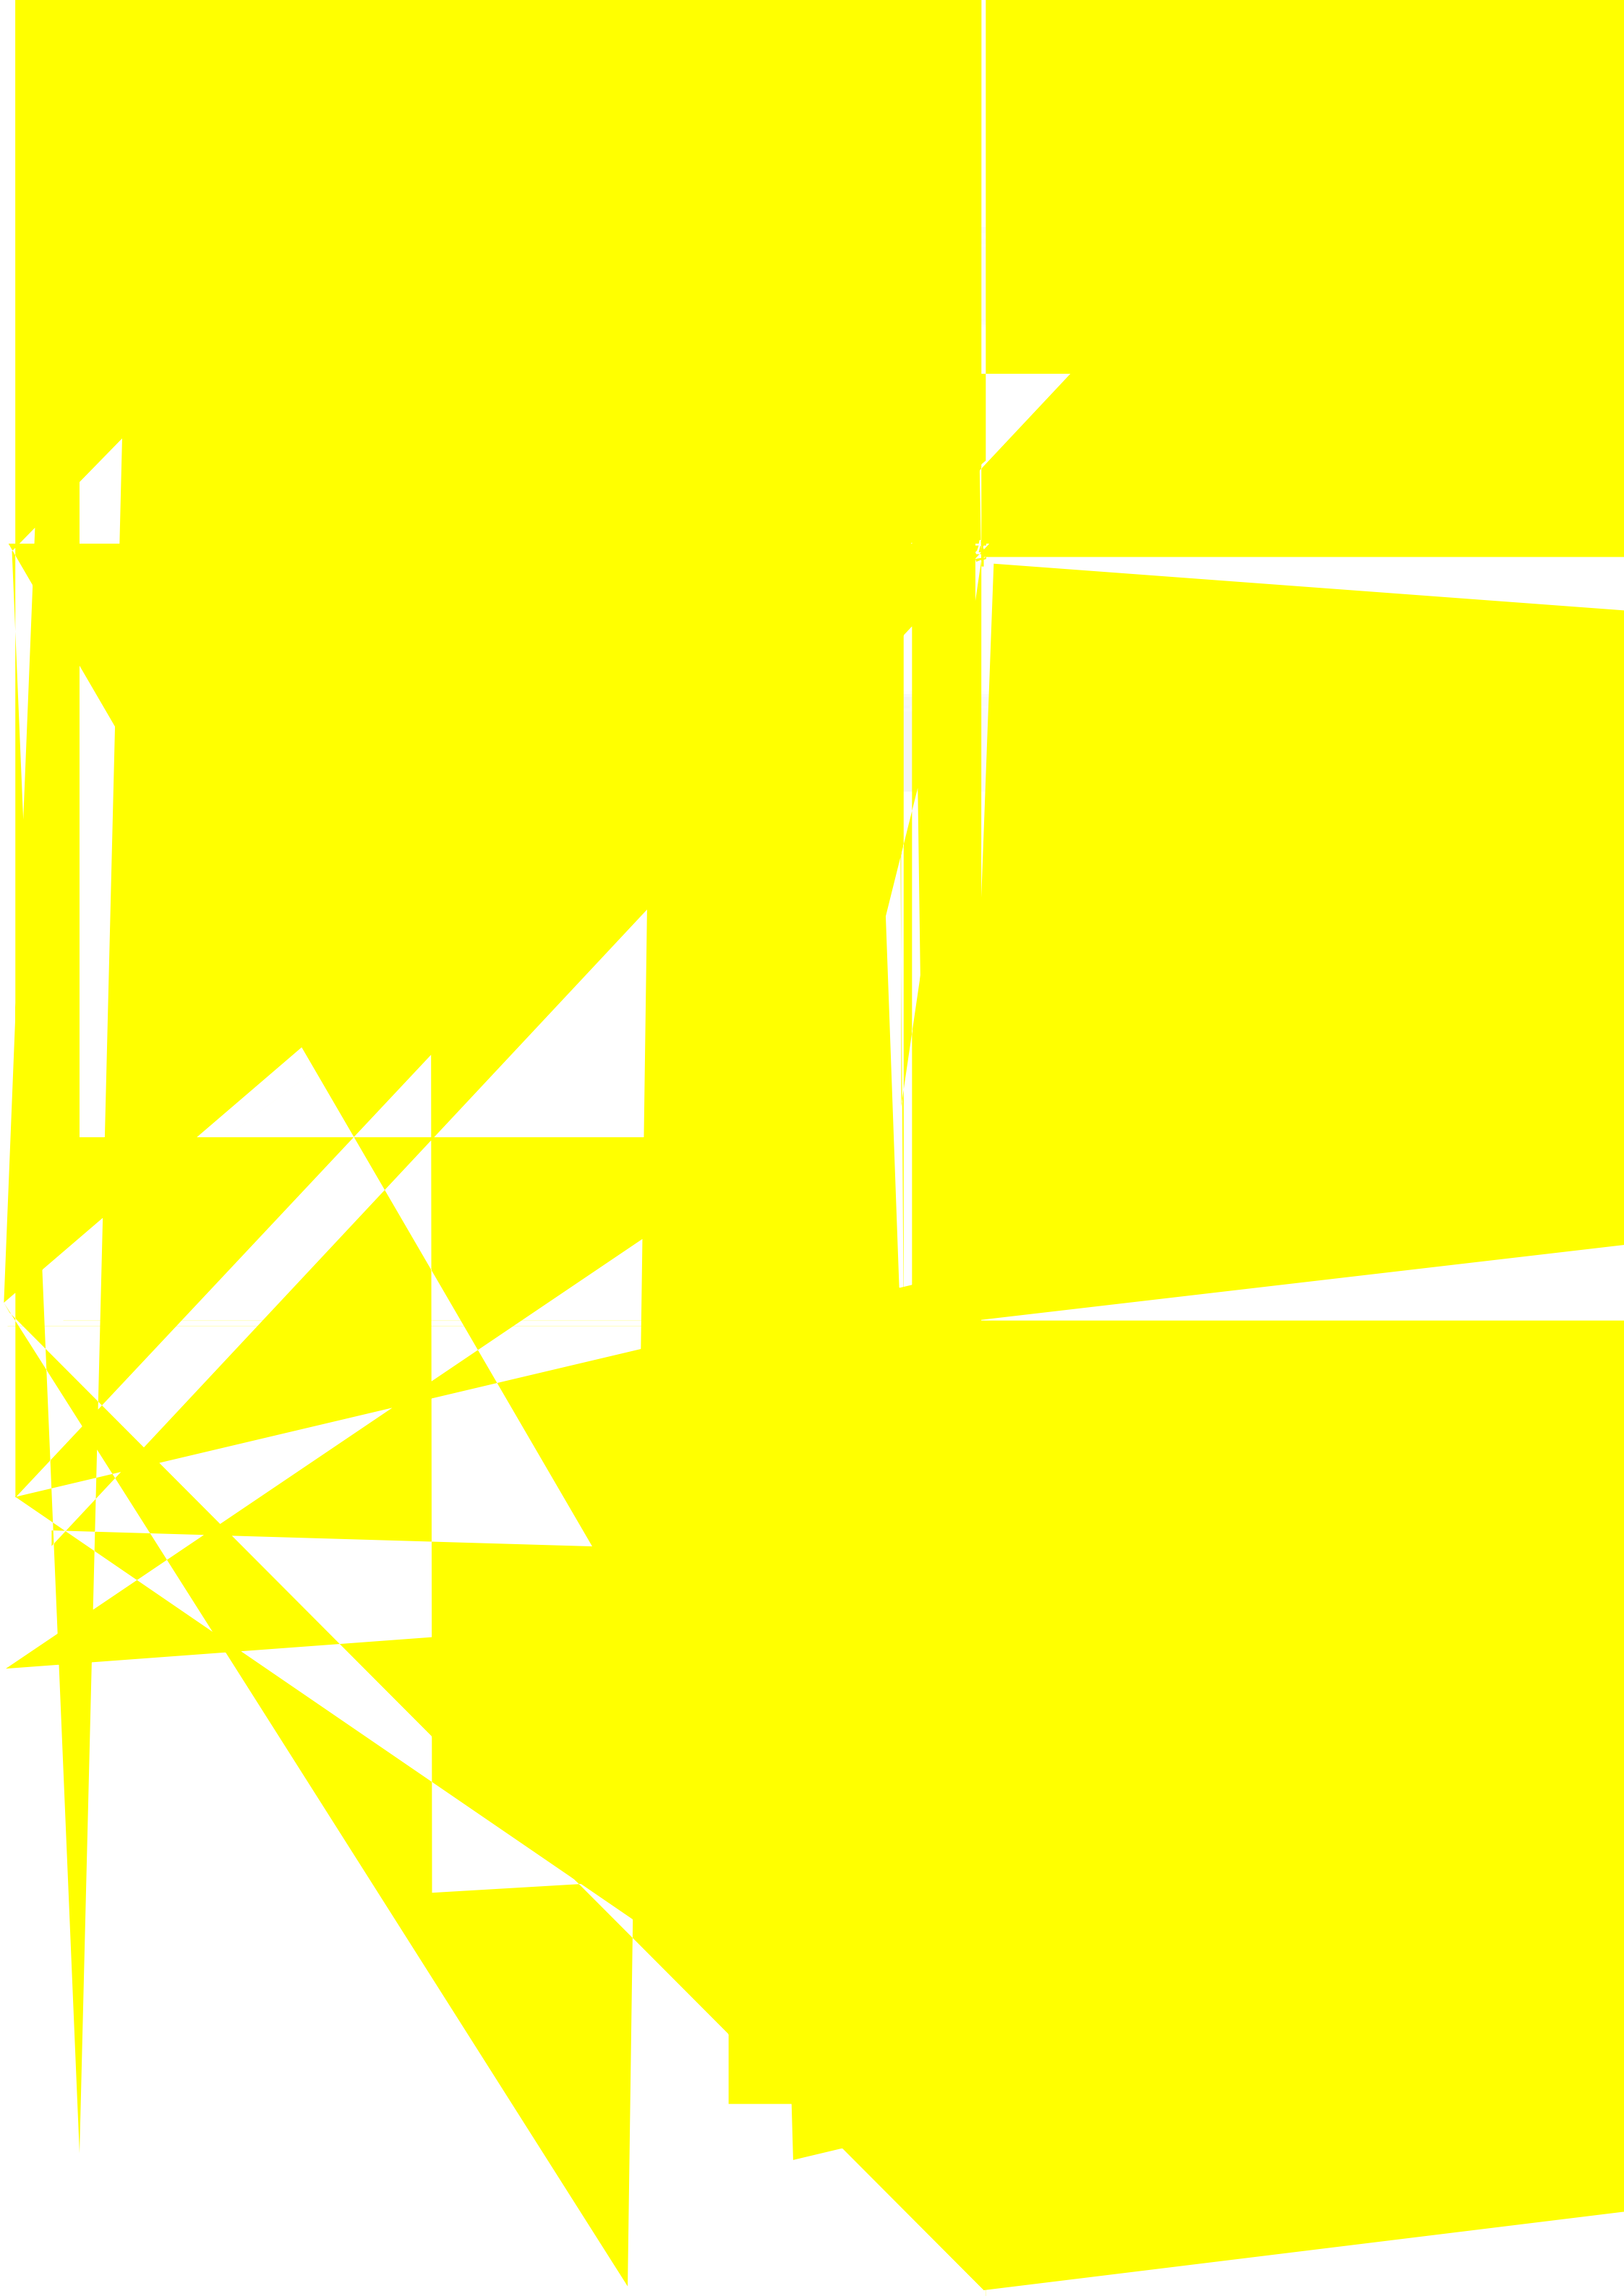

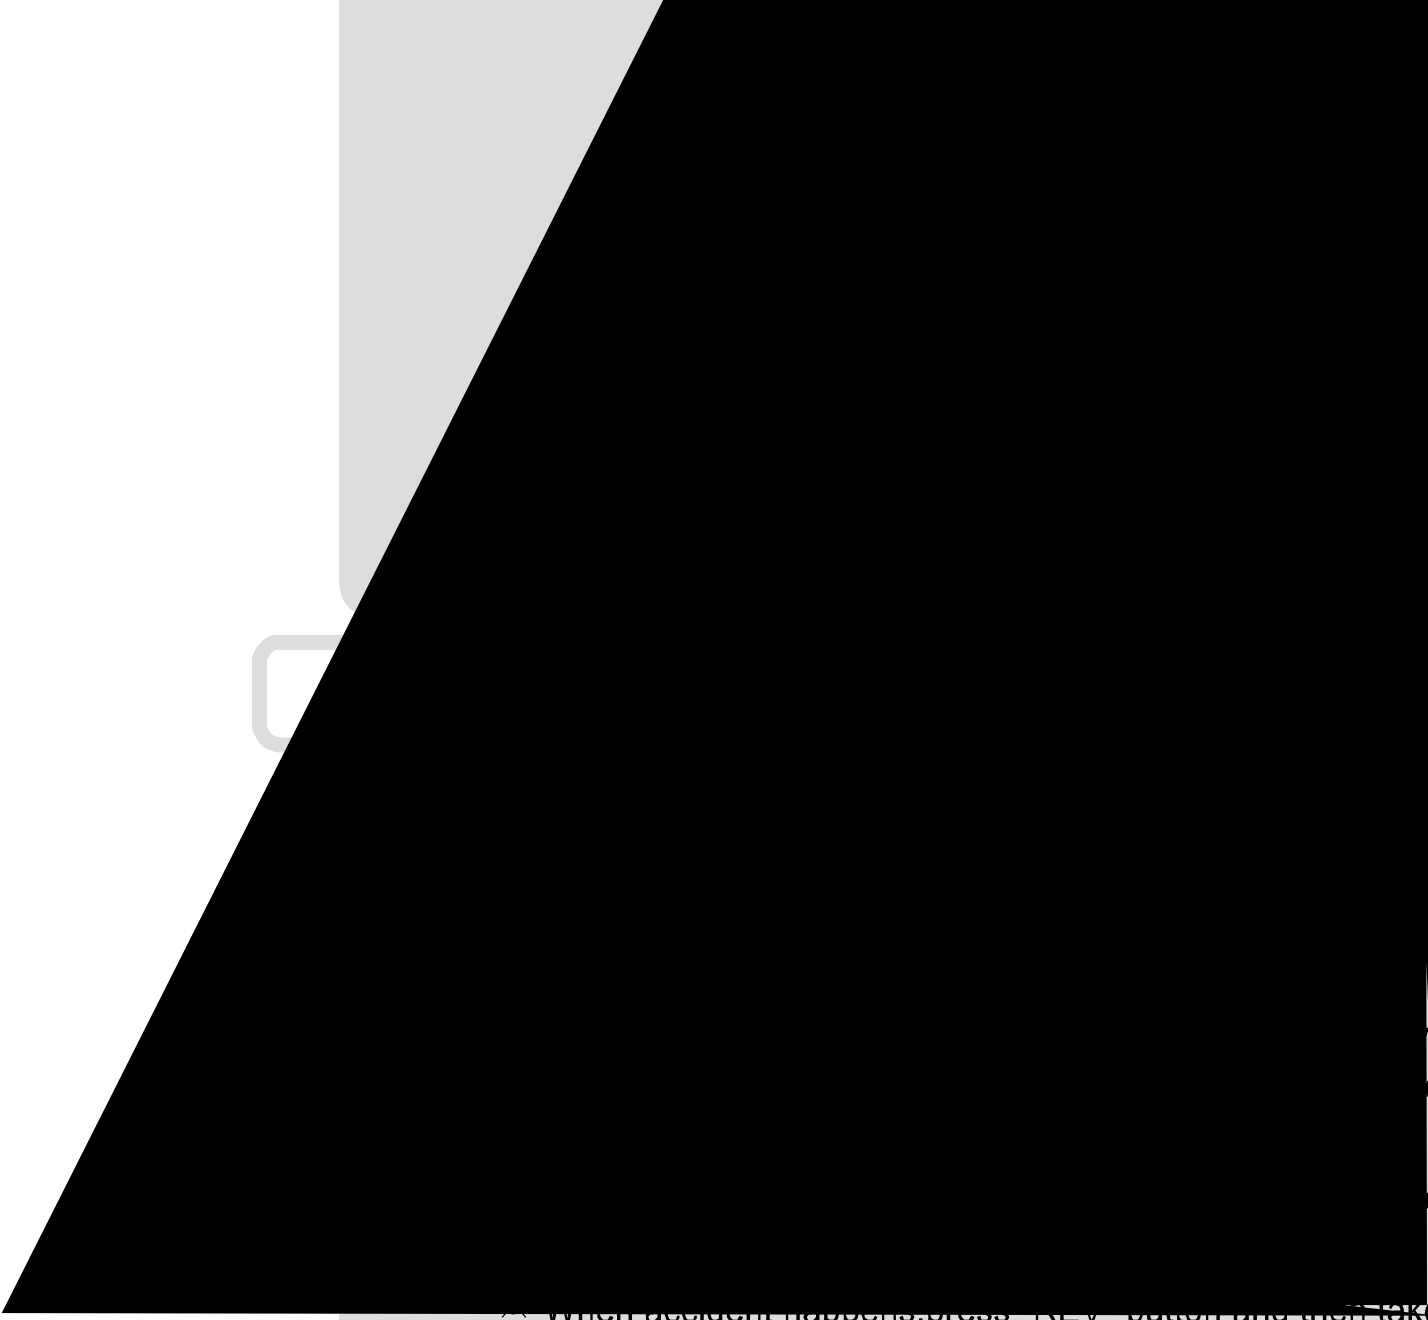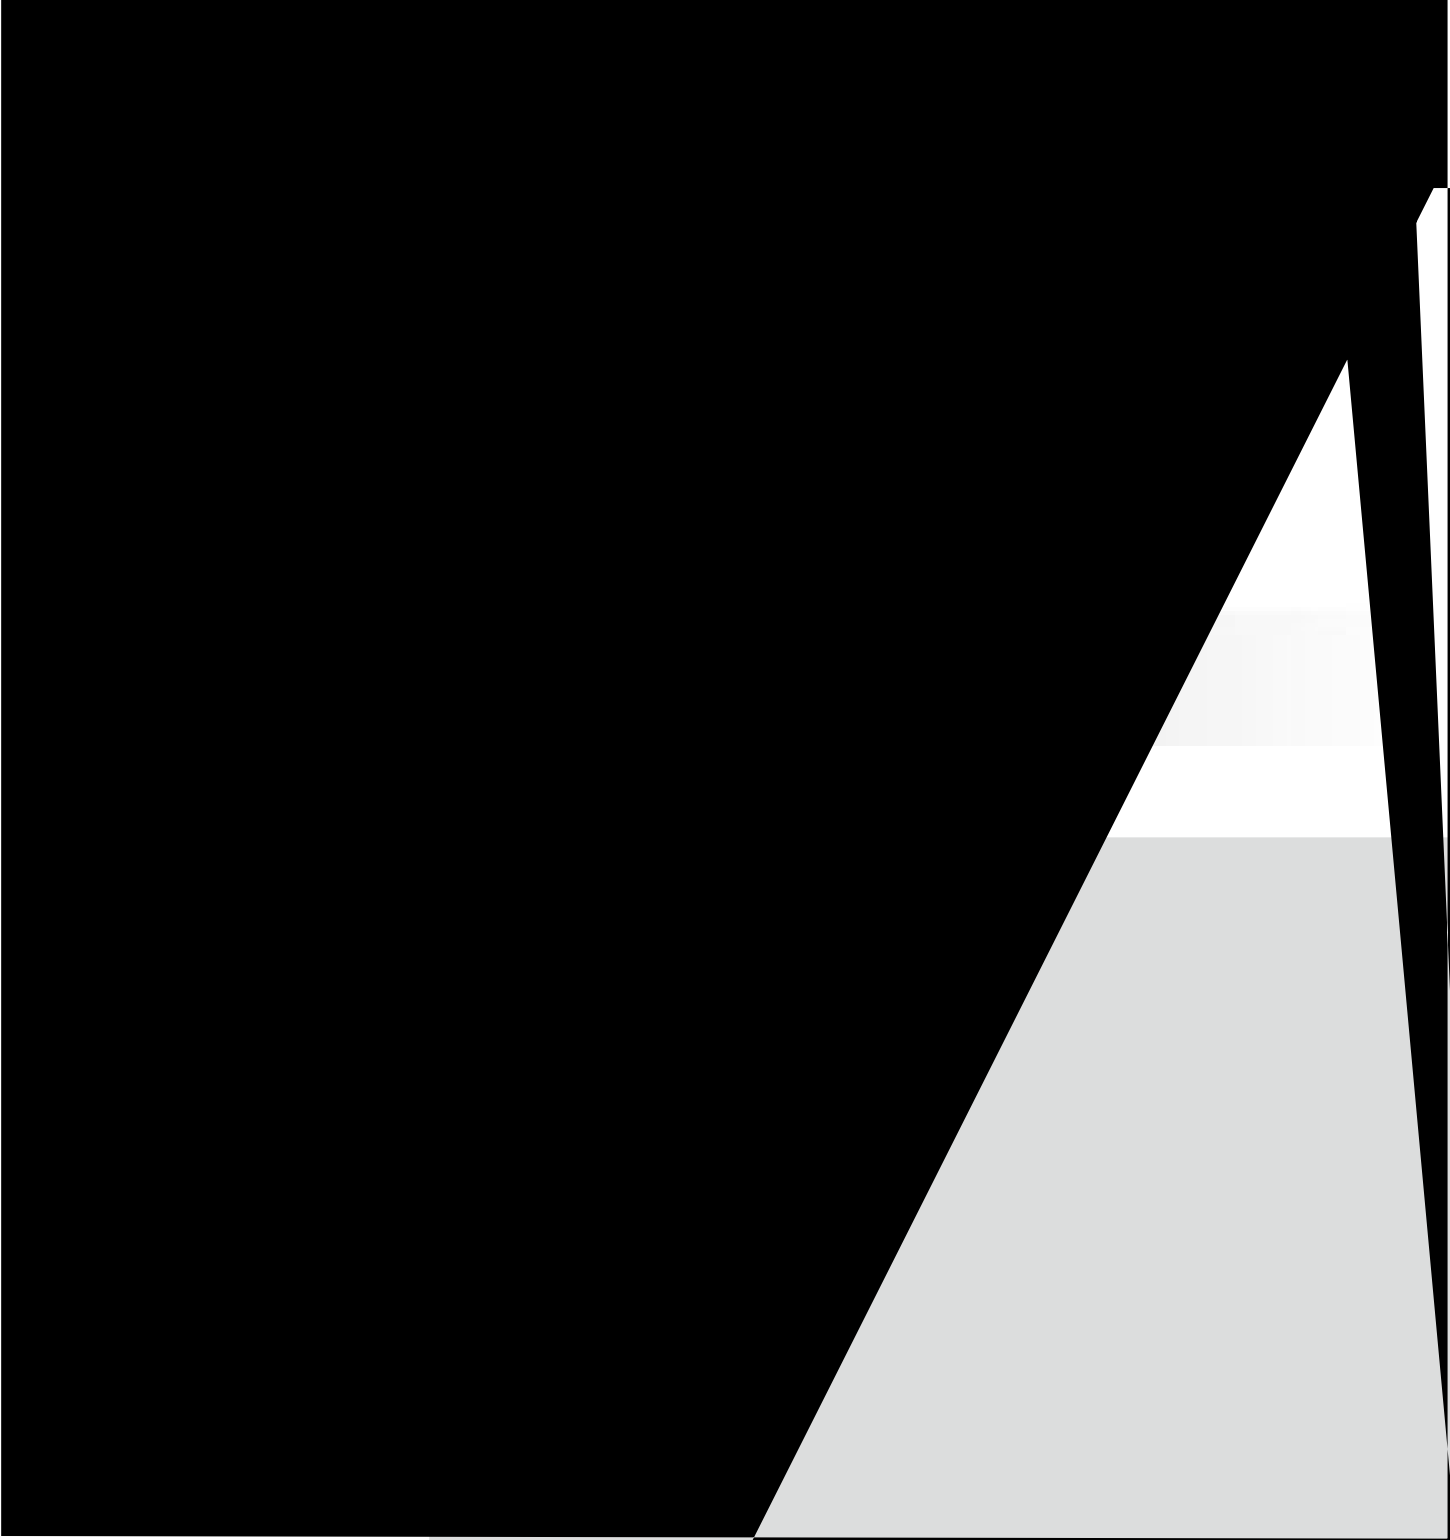

Avoid pulling-in.
 Push it out.
 Pull-in.
 Push it out.
 Push to avoid pulling-in.

When accident happens, press REV button and then take

Packin

NAME	Q'TY



When th

Maintenance

1. Pull out the power plug from the socket of power supply before maintenance
2. The maintenance by user is only limited to cleaning visible surface of the shredder.
3. When cleaning the surface of the shredder, do not allow water to drop into the interior of the shredder.

Trouble Analysis & Troubleshooting

	TROUBLE ANALYSIS	TROUBLESHOOTING
	plug disconnect, no power	

